

HST Automatic Cover Pool Tips

Before you place a service call

- Maintain proper pool water level
- Check main breaker and reset GFI
- Check fuses on limit switches (if equipped), located on circuit board. Disconnect main breaker first
- Do not overtighten brake adjustments

Enhance the life of your cover

- When shocking or super-chlorinating pool, if possible, leave pool uncovered with filtration operating until the chlorine reading has reached a swim-safe level. *The pool should not be left unsupervised when the cover is off pool.*
- Always remove standing water from top of cover and patch holes as soon as possible
- Check the drain in the recessed mechanism box, keeping it free of debris
- Lubricate bearings and grease fittings at the beginning of each pool season

Questions?

Give Us A Call Right Away!



(315) 308- 0478